




## Professional Public Address System

### EMRM-812 Monitor Unit

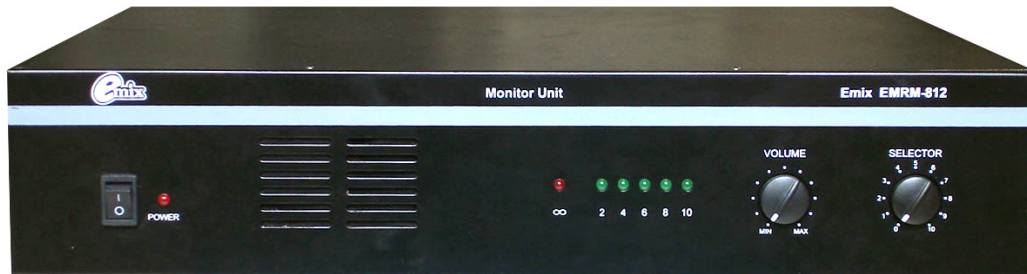

## OWNER'S MANUAL


Before operating, please read this manual completely.

### *FEATURES*

- **10 amplifier output monitoring.**
- **Amplifier selection switch.**
- **Volume control.**
- **LED level meter.**
- **Built in monitor speaker.**


**Left blank for memo**

## FRONT PANEL

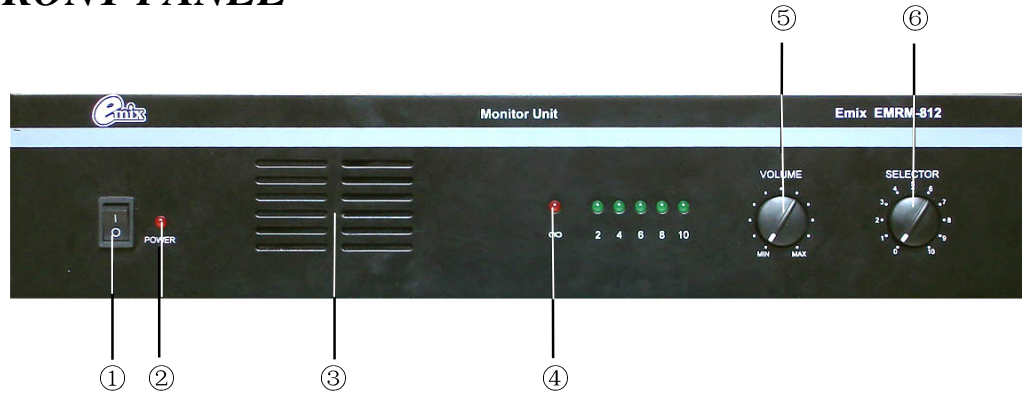


- Power switch** (1 is power on and the “power LED” is on )
- Power indicator**
- Monitor speaker**
- LED level meter**
- Volume control**
- Amplifier selector switch**

## REAR PANEL

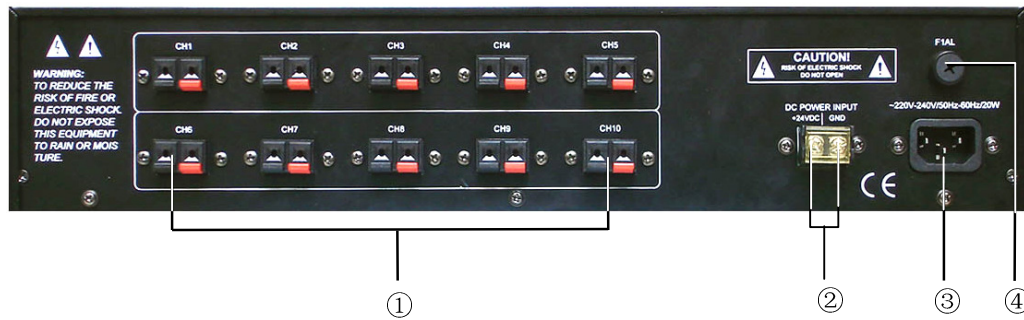

- ① **1-10CH** input terminals
- ② **DC24V** power input
- ③ **AC** power input
- ④ **AC** fuse.

## CONNECTIONS

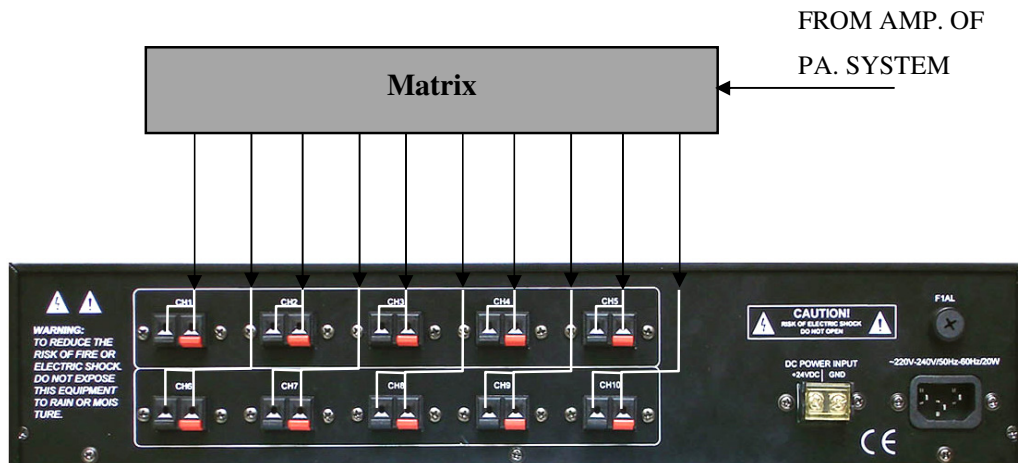

## ***OPERATION***

- 1 Terminal all connections and then turn on the power switch.
- 2 Adjust the volume control for built in speaker loudness.
- 3 Select the desired amplifier which wanted to monitor.
- 4 LED level meter will shows signal strength produce by the selected monitoring amplifier.

## ***SPECIFICATIONS***

<b>Input channels</b>	10
<b>Input signal</b>	70V-100V Line
<b>Frequency response</b>	100Hz-15kHz
<b>Signal to noise ratio</b>	80dB
<b>Speaker</b>	2" x 3" audio speaker
<b>Protection</b>	AC fuse
<b>Power Requirement</b>	AC240V/50Hz, DC24V
<b>Dimensions</b>	485×88×365mm
<b>Gross weight</b>	6.5kg
<b>Net weight</b>	5.2kg

Specifications are subject to be changed without notice.

### **CAUTION**

- When the “Power switcher” is off, please pull out the power cord from the socket. Please keep the equipment out of water.
- To reduce the risk of electric shock, do not remove the cover.
- No user parts inside. Refer servicing to qualified service personnel.