

**Professional Public Address System** 

# EMRM-907C CD/MP3 PLAYER



# **OWNER'S MANUAL**


Before operating, please read this manual completely.

# **FEATURES**

- CD/MP3/MP4/VCD/DVD player.
- VFD display.
- Song or paragraph selection player.
- Automatic play after the AC power resume.
- USB port.

Left blank for memo

### **FRONT PANEL**

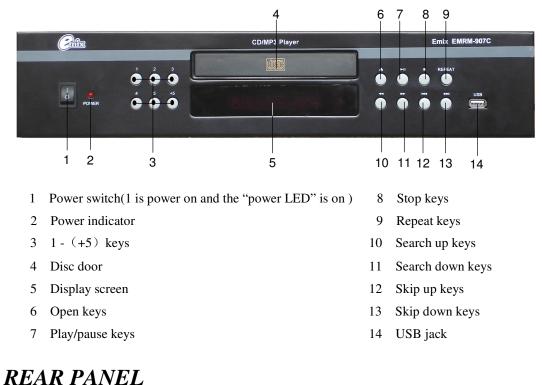

#### OR ELECTRIC SHOCK. ENT TO RAIN OR MOISTURE CE 2 3 5 1 4 Output jack AC fuse 1 4 Remote data input AC power input 2 5 3 Remote data link

### Notice: DVD part of the machine can only output audio signal and has not video frequency broadcasting function.

## **OPERATION**

The setup can play CMF format such as CD、MP3、MP4、VCD、DVD, etc. In this equipment .the mode to provide CMF for setup has CD、MP3、MP4、VCD、DVD dishware and mobile hard disk which connected with USB jack, etc . when this two supply modes concurrence in equipment ,the equipment will read and play the CMF on dish first; when the dish is taken out from

dish storehouse, the equipment will read and play the MP3 CMF which connected with USB port again; while setup is playing MP3 CMF on the mobile hard disk now. At this moment if another dish is put in the dish storehouse, the equipment will read and play the CMF on dish once again.

Press the "POWER" and turn on the equipment, if there is a dish in storehouse or have a USB disk inserted into the USB port, it can search automatically and play the CMF from them; If there is no seemly play music file in the memory, then, if you press whichever operation button of MP3, the display screen will display "NO DISC".

When some CMF format is playing, this format will be lit on the display screen to show the carry. For example : The setup is now playing the MP3 format CMF, "MP3" will be lit on the display screen.

- 1. **Disk Load / Unload** Press key ▲ to open the CD deck, put in or take out a disk and then press key ▲ again for resetting the deck.
- 2. Play or Pause After the deck reset it will play in order automatic ally .Press key ►II while playing for pause, Press the key again for releasing.
- 3. **Option Play** Press ►► or ► and ► or ►► while playing, we can select any song or any paragraph for play.
- 4. **Stop** Press key to stop in any time.
- 5. Remote run This set can be controlled by a program manager of via a link cord. For this purpose, fit a link cord from the Remote Link port of this set to the link port of the program manager. We can use the manager to make programs or timings for this set.
- 6. **Play Repeatedly** When the equipment play the song sequentially, Press REPEAT key once, it will get into the function of repeat mode selecting, and no change have been taken place on the screen. Press REPEAT key once again, it will start the function of the single track and current track play, and " )" icon will be displayed on the screen. Press REPEAT key for the 3rd time, it will play the whole disc repeatedly, If there is folder exist on the disc, after press REPEAT key the 3rd time, equipment will play the current folder repeatedly and "ALL" icon will be displayed on the screen, and if press REPEAT key for the fourth time at the time, it will play the whole disc repeatedly and "ALL"" icon will be displayed on the screen, and if press REPEAT key for the fourth time at the time, it will play the whole disc repeatedly and "ALL "" icon will be displayed on the screen, and if press REPEAT key for the fifth time, it will abolish the setting and cancel the repeated mode. If there is no folder on the disc, after press REPEAT key for the fourth time, it will abolish the setting and cancel the repeated mode.

# **SPECIFICATIONS**

Frequency response	20 <b>Hz</b> -20 <b>kHz</b>
Signal to Noise Ratio	90dB
Dynamic range	90dB
THD	0.005%
Wow & Flutter	Under the limited level
Output level	0dBV
Protection	AC fuse
Power Requirement	AC240V/50Hz
Dimensions	485×88×378mm
Gross weight	6.5kg
Net weight	5.2kg

Specifications are subject to be changed without notice.

# CAUTION

- When the "Power switcher" is off, please pull out the power cord from the socket. Please keep the equipment out of water.
- To reduce the risk of electric shock, do not remove the cover.
- No user parts inside. Refer servicing to qualified service personnel.